



K Y O T O
I N S T I T U T E O F
T E C H N O L O G Y



JUSTUS-LIEBIG-
UNIVERSITÄT
GIESSEN

Name

Lorenz Saalman

SS 25

Spezialisierungsmodul

as part of an internship at Kyoto Institute of Technology (KIT)

Development and Ion-Optical Simulation of an Electron-Impact Ionization Time-of-Flight Mass Spectrometer

handed in by

Lorenz Saalman

8104072

karl.lorenz.saalman@physik.uni-giessen.de

Student of Physics and Technology for Space Applications

JLU: Dr. Kristof Holste

KIT: associate Prof. Kazuo Takahashi

Friday 11th April, 2025

I. Physikalisches Institut

Justus-Liebig-Universität Gießen

Gießen, Germany

Abstract

Contents

1	Introduction	5
2	Scientific Context	6
3	Theory and Methods	8
3.1	Cladosporium sphaerospermum	8
3.1.1	Growth and Morphology	9
3.1.2	Ecological Role and Occurrence	9
3.1.3	Effects on Human Health	11
3.1.4	Response to Radiation	11
3.2	Atmospheric Pressure Plasma	12
3.3	Dielectric Barrier Discharge	13
3.4	Optical Emission Spectroscopy	13
3.5	Sterilization Mechanism	14
3.5.1	Reactive Species	14
3.5.2	Radiation Effects	14
4	Experimental Setup	15
5	Results	16
6	Conclusion	17
	References	18

List of Figures

2.1	Results of the study by Tomoya Ohara and others	7
3.1	Morphology of <i>C. sphaerospermum</i>	10

List of Tables

List of Abbreviations

APP Atmospheric Pressure Plasma
C. Sphaerospermum Cladosporium Sphaerospermum
DBD Dielectric Barrier Discharge
OES Optical Emission Spectroscopy

1 | Introduction

2 | Scientific Context

There have been many recent studies on the use of plasmas for sterilization and its effects on microorganisms [7, 5, 11, 8, 13]. This chapter aims to provide an overview of the scientific context surrounding this topic as well as research on the interaction of fungi with radiation.

The use of plasma treatment in the medical field goes back to the 20th century. Its history is outlined well in [9]. While the first plasma treatments were used on skin their antimicrobial¹ properties were soon discovered. In the 1990s Mounir Laroussi demonstrated the use of DBD plasma for sterilization of surfaces [6]. Its first use focussed on the sterilization of medical instruments and equipment where removing bacteria and viruses is crucial. With this began many studies on the interaction of plasma with bacteria, and it has been shown that DBD plasma can very effectively be used for sterilization [13, 5]. With this many devices have been developed that are now used commonly in hospitals and laboratories [9]. Although sterilization has been studied extensively most of the studies have focussed on the deactivation of bacteria exclusively. Recent studies have started to investigate the interaction of plasma with fungi which is relevant for the food industry and the cleaning of environments [1]. While its efficacy has been proven well it is not yet fully understood which processes carry responsibility for the inactivation of microorganisms especially on fungi. It is believed that the main mechanism of inactivation is the generation of reactive species in the plasma which can diffuse into the cell and damage DNA and proteins [5, 13]. A clear relationship between treatment time, proximity and inactivation rate has been shown.

Non-thermal plasma can however also radiate UV light and the electric field applied through DBD can also have an effect on the microorganisms. A recent study by Li, Yiqian and others [7] has researched the effects of the physical energy of the plasma on bacteria by separating samples with different materials transparent to radiation and electric fields. In this work a similar approach is taken to investigate the effects of the radiation on the fungus *C. sphaerospermum*. The basis for which was formed by previous work by the department for

¹Inhibits the growth of microorganisms.

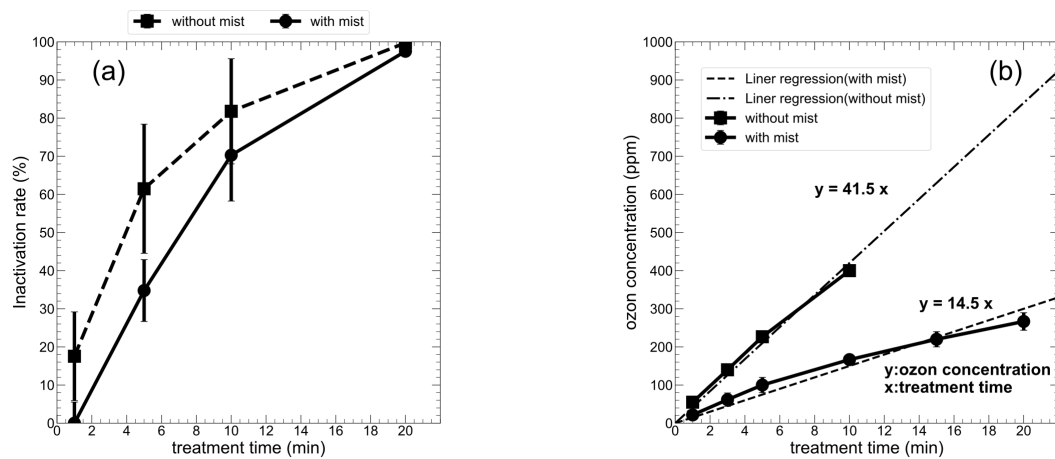


Figure 2.1: Results of the study by Tomoya Ohara and others [11]. (a) inactivation rates of *C.sphaerospermum* as a function of treatment time in the treatments without and with water mist, and (b) ozone concentration as a function of the time.

plasma physics at the Kyoto Institute of Technology done by Tomoya Ohara and others [11] where this study continued. They showed that treatment times of 20 minutes are sufficient to inactivate the fungus by more than 99 % and measure the concentration of ozone and hydroxide ions. Figure 2.1 shows the results of their study.

3 | Theory and Methods

In this chapter the theoretical background and the methods used in this work are presented. This includes the collection of research on the fungal species *Cladosporium sphaerospermum*, as well as the atmospheric pressure plasma and the different processes that lead to the sterilization of the mould as they interact.

3.1 *Cladosporium sphaerospermum*

Cladosporium sphaerospermum (*C. sphaerospermum*) is a species of fungus. Fungi are a large group of eukaryotic organisms¹ that include yeasts, moulds and common mushrooms. It is a black mould that is commonly found in indoor environments, especially in areas that are damp or have high humidity. It was first described by a German mycologist, Albert Julius Otto Penzig, in 1886 from decaying citrus plant material in Italy [12]. *C. sphaerospermum* primarily reproduces asexually through the production of conidia, which are non-motile spores² formed at the tips of hyphae³. These spores are easily dispersed through the air, allowing the mould to rapidly spread into new environments. Moulds like *C. sphaerospermum* require humid conditions because moisture is essential for spore germination⁴. In dry environments, spores usually remain dormant [1].

¹Organisms whose cells have a membrane around their nucleus, which includes animals, plants and fungi.

²Spores not capable of movement.

³Long, branching structures that grow from their tips. They give moulds their furry appearance.

⁴The process by which a spore begins to grow new hyphae.

3.1.1 Growth and Morphology⁵

C. sphaerospermum has a darkly-pigmented mycelium⁶ that can appear black or dark green. The colonies of the mould are typically flat and have more of a powdery appearance than other moulds. It is typical for fungi of the *Cladosporium* family to have branching, tree-like hyphae on whose ends conidia are formed in chains. The spores themselves are round to oval in shape and measure a few micrometers in length. They are very resilient and can stay alive even in conditions not favourable for growth. Due to their small size they are invisible to the naked eye. In Figure 3.1 the morphology of *C. sphaerospermum* is shown.

In addition to a humid environment optimal conditions for the growth of *C. sphaerospermum* include a temperature of 25 °C. It is however a psychrophilic fungus⁷ and can grow at temperatures as low as -5 °C [12]. It nourishes through saprotrophic nutrition, which is the process of using decaying or dead organic matter as a source of nutrients. This is why it is commonly found in decaying plant material, where it was also discovered. The conversion of starch, cellulose and other compounds such as carbon dioxide provides the energy needed for growth.

3.1.2 Ecological Role and Occurrence

Like many fungi *C. sphaerospermum* plays an important role in the ecosystem as a decomposer. It breaks down dead organic matter, recycling nutrients back into the soil, where it thrives. This process is important as it fertilizes the soil and allows for the growth of new plants, enabling the life cycle. Because of its resilience to different conditions it is able to grow in many different environments which include anthropogenic places like indoor environments. In humid areas and on porous surfaces, such as wood or concrete walls it can build mycelium and produce new spores. The easily dispersed spores reach virtually everywhere and are even found in orbiting spacecraft [4].

While fungi don't perform photosynthesis and therefore do not convert CO₂ into oxygen they still contribute to the carbon cycle. By digesting plant material and binding carbon dioxide in their biomass they play an important role in storing carbon and reducing the amount of carbon dioxide released into the atmosphere when plants decay. Because of their abundance they are able to store large amounts and help build stable compounds for long-term soil carbon storage.

⁵The study of the structure of organisms.

⁶A network of branching hyphae.

⁷An organism that is able to grow in very low temperatures.

⁸The outer edge of a cell wall layer formed parallel to the spore surface.

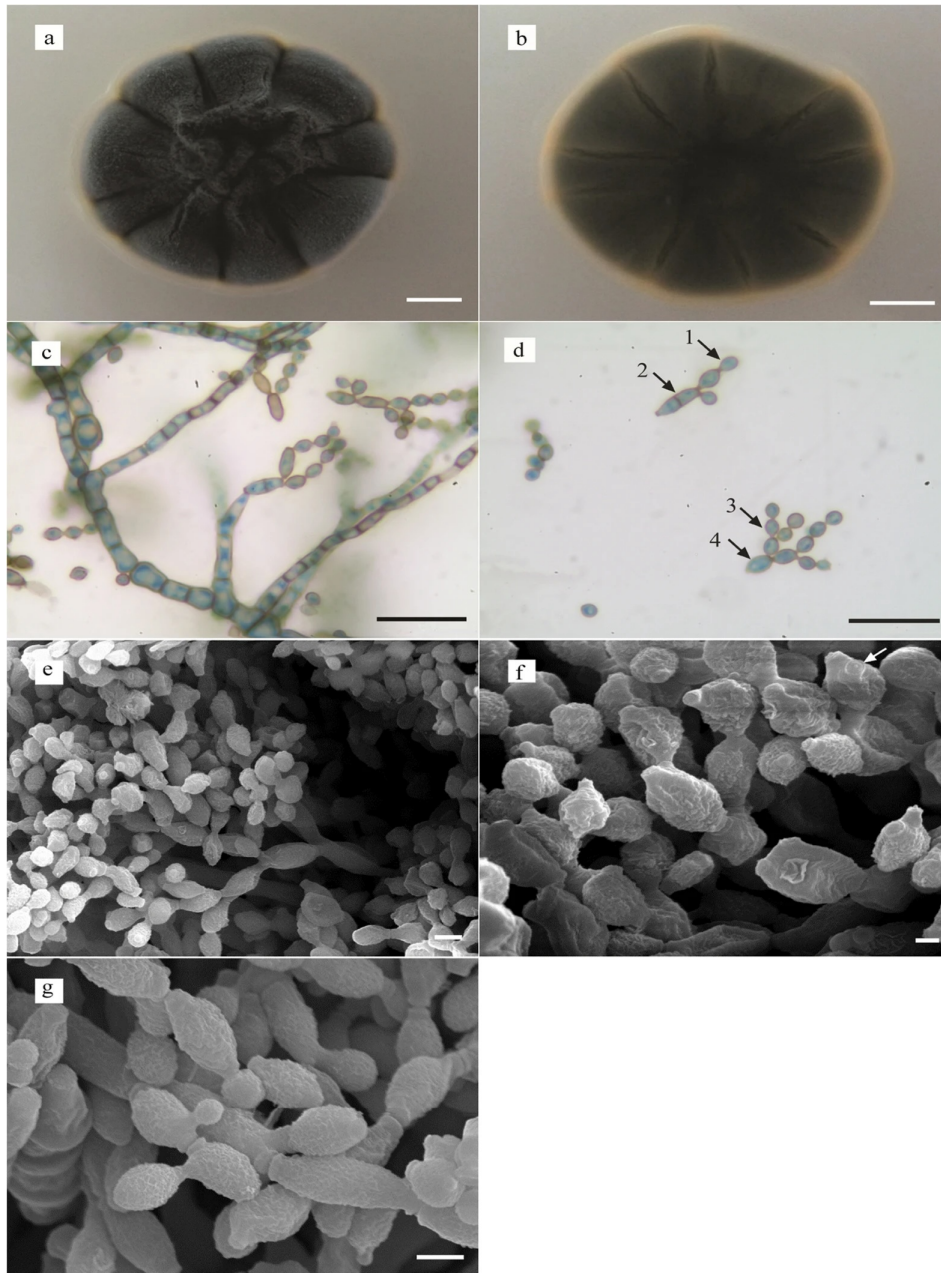


Figure 3.1: Morphology of *C. sphaerospermum* from [14]. Colonial morphology front (a) and reverse (b) of *C. sphaerospermum* UM 843 on SDA after 7-day incubation. Light micrograph showing conidia (d 2 and d 4). $\times 630$ magnification, bars $20\ \mu\text{m}$. Observation under scanning electron micrograph showing (e,f,g) conidiophores bearing conidium (e, $\times 2000$ magnification, bar $3\ \mu\text{m}$), periclinial rim⁸. (f, $\times 5000$ magnification bar $1\ \mu\text{m}$) and verruculose surface of conidia (g, $\times 5000$ magnification, bar $2\ \mu\text{m}$).

3.1.3 Effects on Human Health

Because of its ubiquity *C. sphaerospermum* surrounds humans in their daily lives. The small size of the spores allows them to be inhaled deeply into the lungs where they can lead to allergenic reactions as well as pathogenic infections⁹, particularly when the immune system is weakened. Compared to other airborne moulds it is however not considered a serious health risk as it does not produce mycotoxins¹⁰. Fungi in general can cause respiratory problems, especially when inhaling them in large quantities over a long time. They are however also essential in medical science as they are used to produce antibiotics, such as penicillin. While working with them in the lab clean benches can be used to provide sufficient ventilation but they generally don't pose any danger to a healthy person.

3.1.4 Response to Radiation

UV radiation is commonly used to sterilize surfaces and is very effective in killing most microorganisms like bacteria and fungi. *C. sphaerospermum* however shows a higher resistance to different types of radiation including UV and even high energy ionizing radiation. It is able to not only survive doses of ionizing radiation that would kill most other organisms but also to thrive in these conditions. This was discovered in 1990s as the fungus is able to grow in the high radiation environment of the destroyed Chernobyl nuclear power plant [4], even on the highly radioactive reactor walls. The mould does not only survive in these conditions but was proposed to be radiotrophic - a process where fungi potentially use ionizing radiation as a source of energy analogous to photosynthesis - growing faster.

Its tolerance to radiation both ionizing and non-ionizing is attributed to the pigment molecule Melanin. Pigment molecules such as Melanin absorb visible light and other radiation which can protect cells, can be used to absorb energy and also gives the organism its colour. It gives the mould its dark colour and protects it from UV radiation. Melanin is also able to absorb ionizing radiation and potentially convert it into chemical energy usable to the fungus.

To further research this discovery the mould was sent to the International Space Station in 2018 where it was exposed to cosmic radiation [10]. The study found that the mould was able to survive the radiation and even thrive in the microgravity environment while absorbing some of the energy. The results of the study suggest that *C. sphaerospermum* could potentially serve

⁹A pathogen is any organism that can cause disease in a host.

¹⁰Toxins produced by certain fungi that can cause severe disease in humans and animals.

as a highly sought-after solution for creating a self-replicating biological radiation shield or be otherwise useful in space exploration.

3.2 Atmospheric Pressure Plasma

A plasma is a state of matter that consists of ionized gas and free electrons. The particles behave collectively in a highly dynamic way because they are coupled closely through electromagnetic fields. The state is also conductive and the plasma can be influenced by external electric and magnetic fields [3]. Although the particles carry charges locally, a plasma is electrically neutral when observed as a whole. Plasmas can be created by applying energy in the form of heat or electromagnetic fields to a gas. To ignite a plasma at low temperatures, a discharge is needed, the conditions for which - such as pressure, voltage and distance - are described by Paschen's law. This law states that it is generally easier to create a plasma in a low-pressure environment, as the mean free path (the distance between particle collisions) is larger, allowing the electrons to gain more energy before colliding with other particles, so they can exceed the ionization threshold. This is why many plasmas are created in vacuum chambers. However, with a sufficiently high voltage, it is possible to create plasma at atmospheric pressure also. Such a plasma is known as an atmospheric pressure plasma (APP). APPs have the advantage of being comparatively simple to handle as no vacuum vessel is required to contain them. This also makes it easier to bring them into the proximity of samples for various applications such as sterilization, surface treatment or material processing [3]. To sustain the plasma an alternating current in the Kilohertz range is used, so that the changing electromagnetic field is able to accelerate electrons continuously. The much heavier ions are accelerated only minimally in comparison. Although electron temperatures commonly reach around 10^4 K, it is possible to sustain a plasma at room temperatures if the energy provided is controlled [2]. Such plasmas are referred to as cold plasmas or non-thermal plasmas. Because of the high voltage required to ignite APPs arc discharges can occur between the electrodes which significantly reduce the plasma stability. This makes it very hard to predict their behaviour and would heat them up to much higher gas temperatures which needs to be prevented for many experiments. Dielectric barriers can be used to achieve a controlled discharge and energy transfer.

Many processes occur in a plasma besides ionization. The gas atoms are also frequently excited which leads to the emission of photons as these states are non-stable which gives plasmas their characteristic glow. Molecules can also be dissociated by collisions which leads to the formation of radicals and other chemical bonds that can have varying lifespans. The

radiation as well as the reactive species produced in the plasma allow the plasma to interact with surfaces and materials in its proximity.

3.3 Dielectric Barrier Discharge

To achieve a controlled non-thermal plasma at atmospheric pressure a dielectric barrier discharge (DBD) can be used. This means that the two electrodes that carry the high voltage to ignite and sustain the plasma are separated by a dielectric barrier. There are different configurations to realize this. Some setups use only one dielectric barrier at one of the electrodes while commonly both electrodes - planar or cylindrical - are covered with a dielectric material. The dielectric barrier is a non-conductive material that prevents the formation of an arc discharge between the electrodes but can be polarized by the electric field. Often glass, quartz or ceramics are used for this purpose. While the plasma is ignited the dielectric barrier prevents the electrons from flowing freely between the electrodes and charges are built up on the surface of the dielectric. This stops the discharge very quickly and thereby limits the current flow, an alternating current is needed. By controlling the voltage and frequency of this current the discharge can be sustained in a stable way. The dielectric barrier also helps to create a uniform electric field similar to its use in capacitors.

DBD is used widely in different applications that require a non-thermal plasma like the semiconductor or medical industry. It is used for surface treatment, cleaning and sterilization, like in this work, where a cold plasma is needed that does not destroy the surfaces it interacts with. It is interesting

3.4 Optical Emission Spectroscopy

Optical emission spectroscopy (OES) uses the electromagnetic radiation emitted by a plasma to analyse its composition. This can be done non-intrusively meaning that the plasma does not need to be disturbed and remains unaffected by the measurement. That is a major advantage when working with small volumes of plasma like in this work where probes would significantly change the conditions [2]. OES measures a spectrum of the emitted light which gives the intensity at different wavelengths. Because the photons originate from distinct transitions between energy levels sharp peaks are observed in the spectrum. Their wavelength can be used to identify the species that are present in the plasma as well as the processes that occur. This

also allows an estimate of the plasma temperature and the concentration of the different gases in the plasma, although more information like cross-sections for the different processes is needed [2]. Boltzmann plots are often used to derive the electron temperature from the measured spectrum, however they assume local thermal equilibrium which is not the case in non-thermal plasmas. This means that the electron temperature is not equal to the gas temperature and the Boltzmann plot can only be used as an approximation [2].

In OES one needs to account for the spectrometer's spectral response, which is the sensitivity of the detector per wavelength. This is usually done by measuring a calibration spectrum and correcting the measured spectrum accordingly.

3.5 Sterilization Mechanism

APPs have been used for sterilization of surfaces in many studies as outlined in chapter 2. Although the plasma is not in direct contact with the sample two main mechanisms have been found to be responsible for the sterilization effect. The first is the radiation emitted by the plasma, which can be UV or visible light. The second is the reactive species that are produced in the plasma and interact with the surface. Additionally, heat as well as electric fields can also play a role in the sterilization process. The exact mechanism is still subject to research and what process dominates depends on the specific setup and sample.

3.5.1 Reactive Species

3.5.2 Radiation Effects

4 | **Experimental Setup**

5 | Results

6 | Conclusion

References

- [1] Rivka Barakai-Golan. *Postharvest Diseases of Fruits and Vegetables*. Elsevier Science, 2001. DOI: 10.1016/B978-0-444-50584-2.X5000-X.
- [2] Pascal Chabert and Nicholas Braithwaite. *Physics of Radio-Frequency Plasmas*. Cambridge: Cambridge University Press, 2011. ISBN: 9780511974342.
- [3] Francis F. Chen. *Introduction to Plasma Physics and Controlled Fusion*. 3rd ed. Cham: Springer Cham, 2016. ISBN: 978-3-319-22308-7.
- [4] E. Dadachova and A. Casadevall. “Ionizing Radiation: how fungi cope, adapt, and exploit with the help of melanin”. In: *Curr Opin Microbiol*. 11.1 (2008). DOI: 10.1016/j.mib.2008.09.013.
- [5] Tobias G. Klämpfl et al. “Cold Atmospheric Air Plasma Sterilization against Spores and Other Microorganisms of Clinical Interest”. In: *Applied and Environmental Microbiology* 78.15 (2012), pp. 5077–5082. DOI: 10.1128/AEM.00583-12.
- [6] M. Laroussi. “Sterilization of Contaminated Matter with an Atmospheric Pressure Plasma”. In: *IEEE Transactions on Plasma Science* 24.3 (1996). DOI: 10.1109/27.533129.
- [7] Y. Li et al. “The biological effect of the physical energy of plasma”. In: *Plasma Sources Science and Technology* 33.2 (2024). DOI: 10.1088/1361-6595/ad29bf.
- [8] Yiqian Li et al. “The Effect of Plasma on Bacteria and Normal Cells in Infected Wound”. In: *BioMed Research International* (2022). Published 30 November 2022. DOI: 10.1155/2022/4592081.
- [9] Judith Napp et al. “On the history of plasma treatment and comparison of microbiostatic efficacy of a historical high-frequency plasma device with two modern devices”. In: *GMS Hygiene and Infection Control* 10 (2015). ISSN: 2196-5226.
- [10] Graham K. Shunk Nils J. H. Aversch and Christoph Kern. “Cultivation of the Dematiaceous Fungus *Cladosporium sphaerospermum* Aboard the International Space Station and Effects of Ionizing Radiation”. In: *Frontiers in Microbiology* 13.877625 (2022). DOI: 10.3389/fmicb.2022.877625.

-
- [11] Tomoya Ohara, Shinano Kinoshita, and Kazuo Takahashi. “Inactivating *C. sphaerospermum* and its Mechanism in Atmospheric Pressure Plasmas with Water Mist”. In: *Proceedings of the 26th Europhysics Conference on Atomic and Molecular Physics of Ionized Gases (ESCAMPIG XXVI)*. Topic number: 10. Europhysics Conference on Atomic and Molecular Physics of Ionized Gases. Brno, Czech Republic, July 2024.
- [12] G.S. de Hoog P. Zalar et al. “Phylogeny and ecology of the ubiquitous saprobe *Cladosporium sphaerospermum*, with descriptions of seven new species from hypersaline environments”. In: *Studies in Mycology* 58 (2007). DOI: 10.3114/sim.2007.58.06.
- [13] Hideharu Shintani et al. “Inactivation of Microorganisms and Endotoxins by Low Temperature Nitrogen Gas Plasma Exposure”. In: *Biocontrol Science* 12.4 (2007). DOI: 10.4265/bio.12.131.
- [14] Su Mei Yew et al. “Insight into different environmental niches adaptation and allergenicity from the *Cladosporium sphaerospermum* genome, a common human allergy-eliciting Dothideomycetes”. In: *Nature* 6 (2016). DOI: 10.1038/srep27008.

Anhang